




Your cubing and dimensional weighing solution

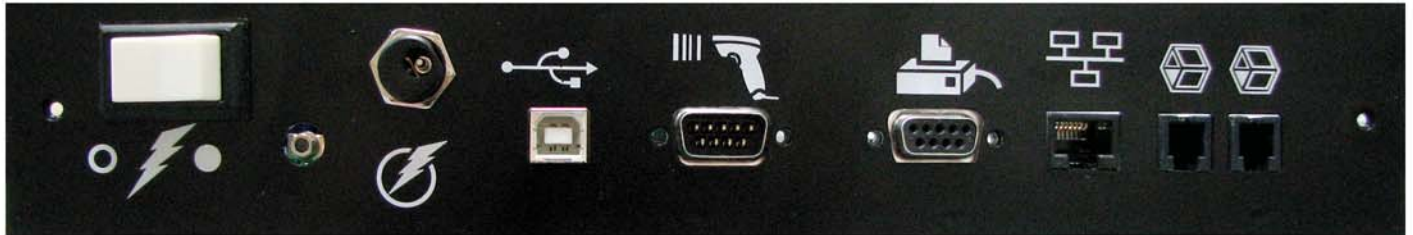

Symbol	Function	Description
	Power Switch	Switches ExpressCube unit ON/OFF
* (unmarked)	Calibration	*Authorized Personnel Only* Removal or damage to this seal voids certification approvals
	Power Adapter	Use only ExpressCube™ provided adapters to avoid damaging the unit and voiding the warranty
	USB	Connected to local computer if the device is operated under software control.
	Hand Scanner	Connect to handheld scanner (not supplied). The port is a male RS-232 serial interface.
	Printer	Connect to a printer (not supplied). This is a female RS-232 serial interface that provides ASCII output.
	LAN¹	10Base-T Ethernet port (Optional). Easy hardware connection but both the device and server must be set-up by IT personnel.
	External Devices	These connectors are used to connect ExpressCube™ external devices such as the customer display or control box.

¹ Optional



The main unit LED indicators are a set of four LEDs mounted on the front of the main platform of the ExpressCube™ countertop. They give an accurate status of the ExpressCube™ countertop main computer and are unaffected by third party software.

- Red – Power – A steady illumination indicates that the unit has power.
- Yellow – Valid Dimension – A steady illumination indicates that the ExpressCube™ countertop has measured a parcel placed on the platform.
- Green – Valid Weight – A steady illumination indicates that the ExpressCube™ countertop has weighed a parcel placed on the platform.
- Blue – Zero – A steady illumination indicates that the ExpressCube™ countertop is in a zero (no-load) condition.